


# Servicing the Uridan waterless urinal

1. **Always wear appropriate safety clothing when servicing the urinal**
2. Insert the special key into the hole in the stainless steel waste cover that is shaped as a slot.
3. Rotate the key 90 degrees and lift off the stainless steel waste cover.
4. Using a small pair of pliers remove the small pipe in the waste trap.
5. Remove uric scale deposits from underneath waste cover and inside of large PVC pipe with key and/or stiff brush and rinse.
6. Ensure that the drain holes in the cover are clear.
7. Flush out the waste trap with water to clean out any deposits. Use a brush if necessary.
8. **Pour large bucket of water (9 litres) into the bowl to flush out sewer line.**
9. Clean uric scale deposits from the small pipe and relocate into the waste trap.
10. Pour in water until it reaches the top of the small pipe.
11. Replace the stainless steel waste cover.
12. Pour in a 300ml bottle of Urilock over the stainless steel waste cover.
13. Spray around waste cover with Uriclean and wipe with a cloth.
14. The urinal is now ready for use again.

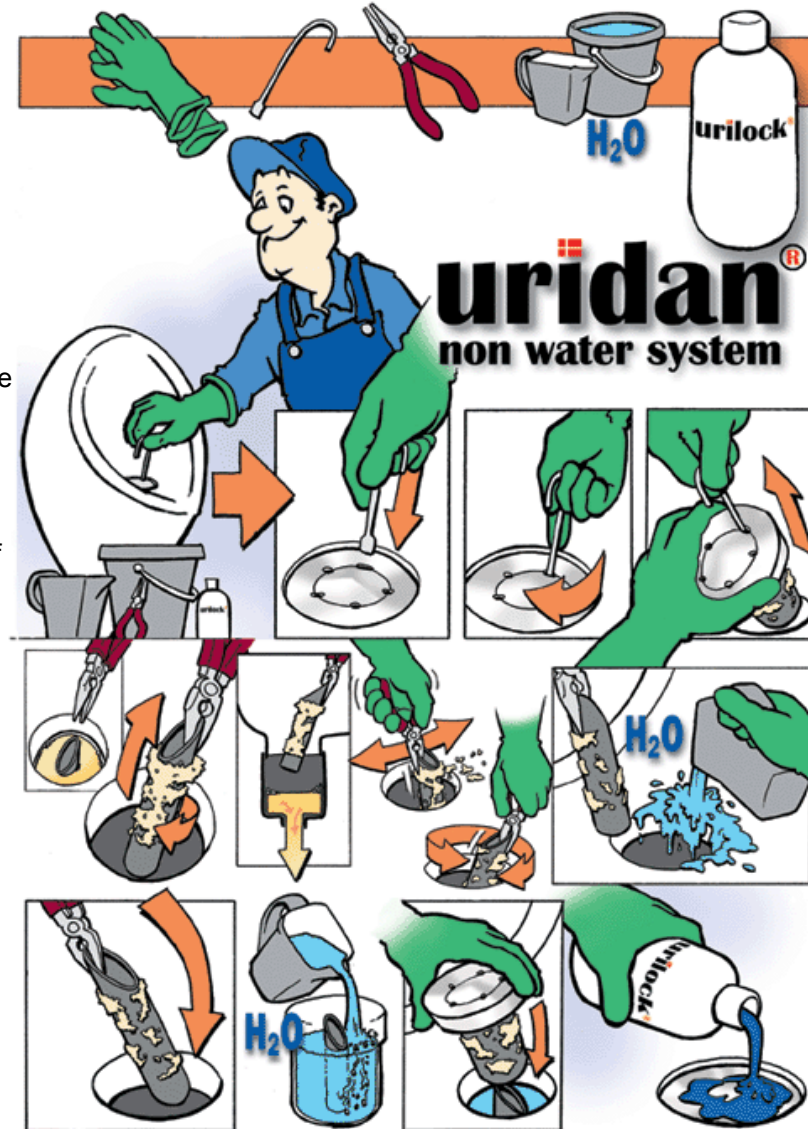

**For enquiries please contact Watersave Australia Pty Ltd**

**Phone : (02) 9986 2700 or Fax : (02) 9986 2711**