


Mounting Instructions for Privacy Screen.

The lower edge of the privacy screen (X) should be positioned level with the lower edge of the urinal. Included are 4 components and 8 off 75 mm screws for mounting the partition to a solid wall (Z). For all other wall types, appropriate fixtures should be used.

After mounting, apply silicon sealant around outer edge to wall.

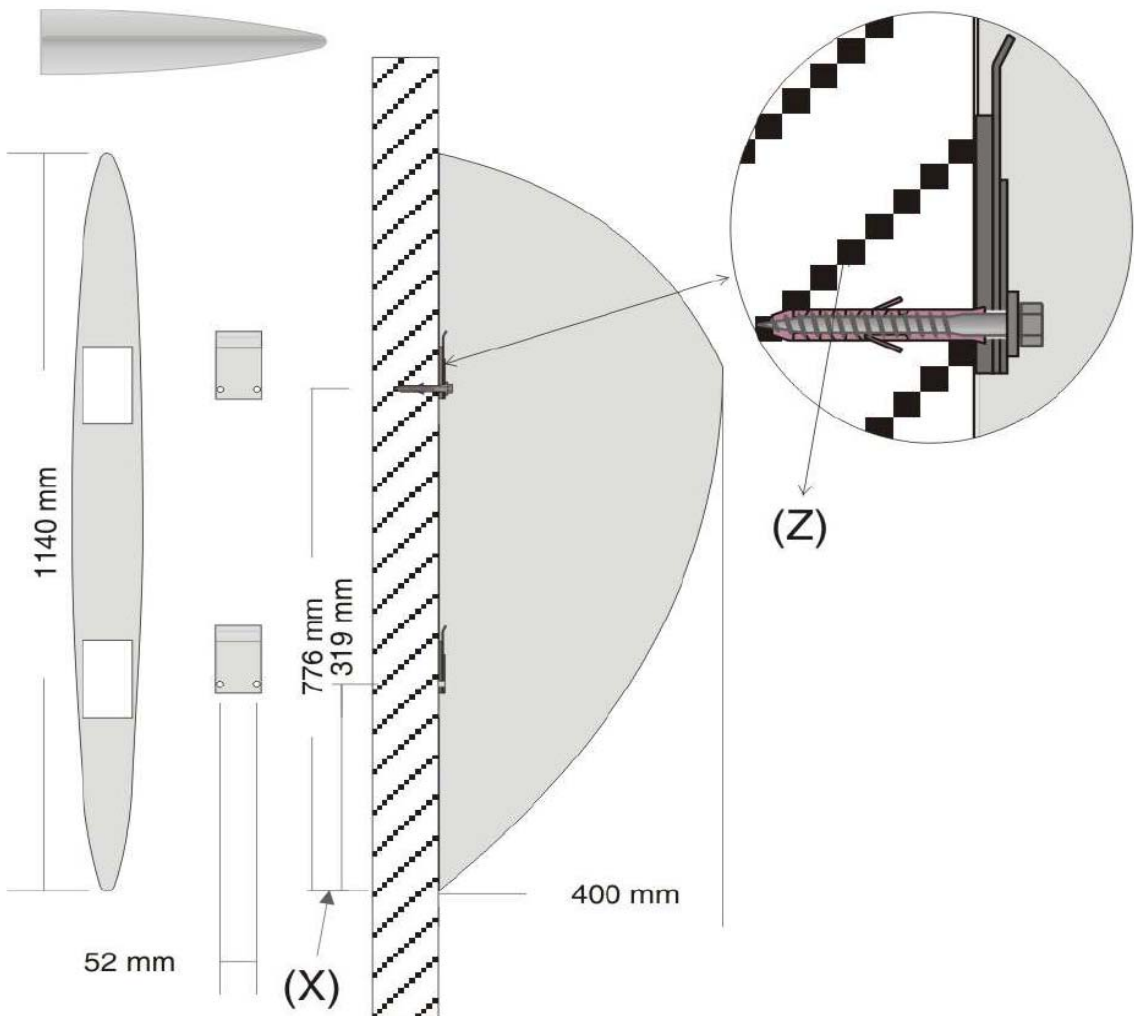

For more information, please contact
Watersave Australia – 1300 368 603 or 0403 822896